
Ultrasonic Cleaning Machine

ZX-913 User's Manual »

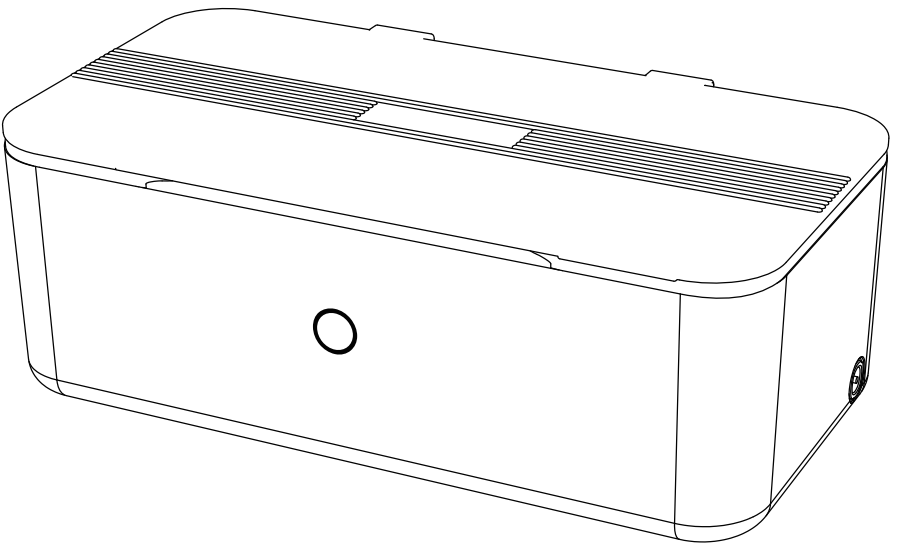

The pictures in this manual are for reference only, please refer to the actual product

Please read the instruction manual carefully before using this product
Please keep this instruction manual properly

Ultrasonic Cleaning Machine

- Thank you for purchasing this product.
- For correct and safe use, please read the instruction manual carefully before use.
- Please keep this manual properly so as not to lose it.

Contents

- Safety precautions and daily maintenance 1
- Principle of Cleaning 2
- Product name and function introduction 2
- Product Specifications 2
- Operation guide 3
- Points to note when cleaning 4
- Caution 4

Safety precautions and daily maintenance


In order to avoid fire, electric shock, and personal injury, please be sure to comply with the following requirements: please follow the relevant national and local electrical regulations.

- Please unplug the power when the product is not used for a long time.
- Waterproof unavailable.
- Please put the product in a safe place to prevent it from falling into water or other liquid.
- When the product falls into the water, please take out the product immediately, unplug the power supply, and drain the product.
- When subjected to electromagnetic interference, it may cause the product to be shut down or cannot be shut down. If it happens, please follow the "User Guide" to re-operate.
- Please use the product correctly according to the "User Guide", and do not use accessories or accessories that the manufacturer has not recommended.
- Do not use plug-in cables or damaged AC power adapters. If the product does not work properly or is damaged, please take the damaged product to the designated maintenance point for inspection.
- Do not plug in the product when unattended.
- This product cannot be used as a toy for children.
- Please store the product out of reach of children.Keep the product away from heat sources and place on a dry, flat surface.

Principle of Cleaning

Use its waveform to propagate in the liquid medium to make the liquid cavitation and produce vacuum bubbles. The inside and outside of the vacuum bubbles generate a lot of pressure. The larger the vacuum bubble, the greater the pressure, and the greater the impact force when it ruptures, the destructive force is The higher the value, we will choose different ultrasonic frequencies according to different objects, which has the effect of cleaning without damaging the object itself. If chemicals are added, ultrasound can speed up the chemical reaction and improve cleaning efficiency!

Product components and functions introduction

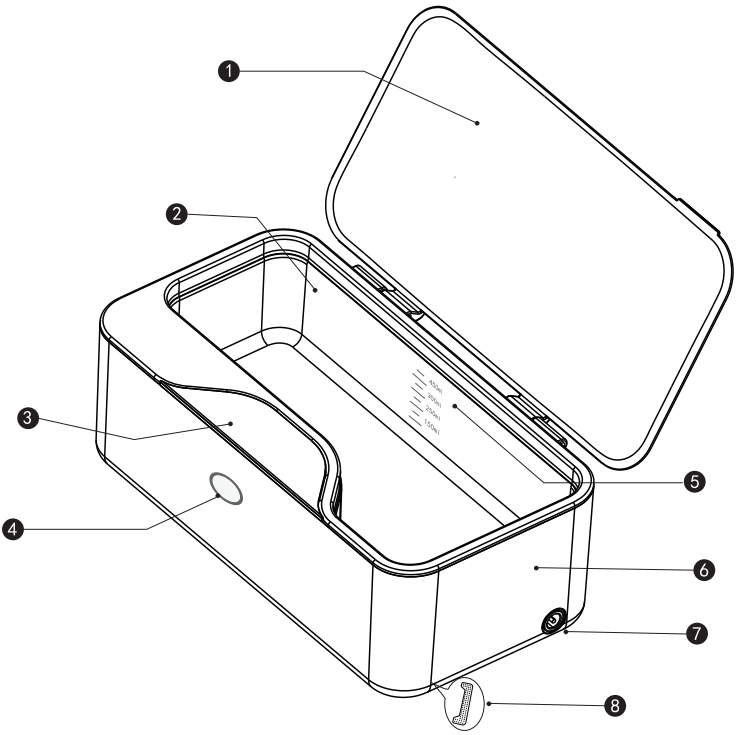


❶ Cover ❷ Tank ❸ Cover ❹ Touch button

❺ Water mark ❻ Case ❼ Power socket ❽ Anti-slip design

Product Specifications


Model	ZX-913	Rated Voltage	12V⎓1.5A
Frequency	46KHz	Input Voltage	100-240V 50/60Hz
Tank Size	175X85X45mm	Power	18W
Machine Size	185X100X65mm	Capacity	450ml
Cleaning Time	One key cleaning for 3 minutes	Net / Gross Weight	440/750g

Operation guide

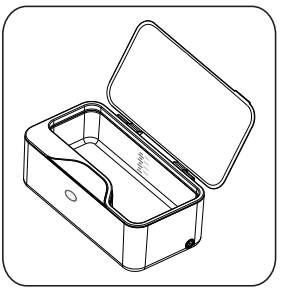


⚠ Adding clean water without water operation will damage

Open the upper cover, pour clean water into the stainless steel inner tank, and put the items to be cleaned in the water. (The parts of the article that need to be cleaned are fully immersed in the water, but the water level does not exceed the highest water level line).

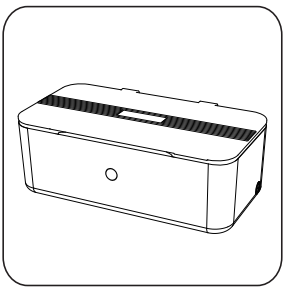


Operation before starting

Please plug in the cable before powering on, and the power socket should be waterproof.

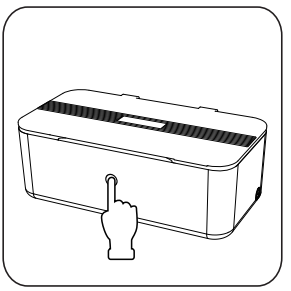

Start cleaning

Connect the power, click the touch switch button to start the device, the machine starts to work. After the cleaning is completed in 3 minutes, the machine automatically stops working.

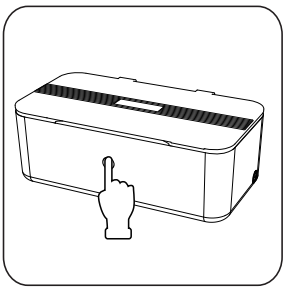

Care and maintenance


After cleaning, pour out the water in the cleaning tank and use clean cloth or spun yarn wipe clean the stainless steel inner tank and body of the washing machine. Place the product in the cold store in a dry place.

❶ When encountering relatively large solid particles, you can clean up the larger solid particles before cleaning.
❷ If you encounter stains that are difficult to clean, you can soak the items to be cleaned for a while, and then clean them.


Caution

Non-professionals, disassembly is strictly prohibited


Problems that need to be paid attention to when cleaning

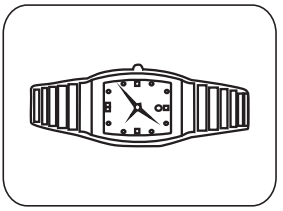

The watch is a precision instrument. Even if it is waterproof, it is not recommended to put the whole piece in the clear wash. Hand-held cleaning or cleaning with watch holder is recommended. When cleaning, put in a few drops of cleaning fluid for better cleaning effect.

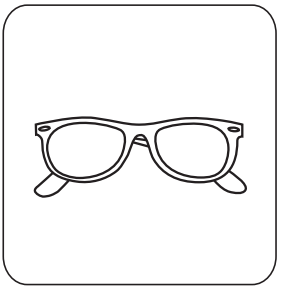

The lens needs to be placed upwards, and the cleaning time is 1-3 minutes to clean stubborn dirt when stains, apply the cleaning solution evenly on the lens, and then put it in for cleaning better cleaning effect. As the domestic coating technology has not broken through, the lens film may be for glasses with frame coating process, please consult the optical shop to confirm whether it is available use ultrasonic cleaning to avoid unnecessary losses.

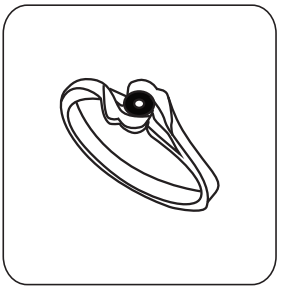

If there is oxidized black jewelry, it can be washed with silver washing water and then put into ultrasonic Internal cleaning, adding a few drops of cleaning liquid during cleaning can enhance the cleaning effect better washing effect. (If diamond rings, pendants and other jewelry are inlaid, please confirm whether the inlay is intact and firm, if it is loose, it is not recommended to put in the ultrasonic cleaning wash, so as not to cause shedding

TIPS

Pearl jewelry, jade articles, gems with soft surface hardness; severe cracks heavy objects; poor-quality supplies and wood products with poor plating and finishing are not suitable use this product together for cleaning; please consult whether lacquerware and some valuables can be cleaned clean after inquiry.

Certificate of conformity

Product name : Intelligent ultrasonic cleaner

Model : ZX-913

Inspectors : 6

Test result : 合格

WARRANTY CARD

Cause of issue	Maintenance records	Maintenance time

Warranty notes

Thank you very much for purchasing this product! The relevant certifications of our products are complete, and all products have been strictly tested before delivery From the date of purchase, we promises to provide "one-year warranty, lifetime maintenance" service, but the return freight is borne by the buyer, and the maintenance service outside the warranty scope will be charged according to the actual situation.

The following situations are not covered by the one-year free warranty:
1. Exceeding the warranty time; 2. All man-made damage; 3. Failure to operate, maintain, and keep in accordance with the product instruction manual causes damage; 4. The user disassembles the machine for maintenance without permission; 5. Without this warranty card or altering the warranty card without authorization; 6. The product model on the warranty card does not match the actual product;
7. Damage caused by force majeure during use, such as floods, earthquakes, etc.

Return & exchange Precautions

Please complete the return and exchange content, reason, model, purchase time, contact person, phone number,Consignee address, and strengthen the packaging before sending back. Please ensure that the packaging of the tank of the returned machine is complete and clean. If the tank or the appearance is dirty, scratched, deformed and other factors that affect the secondary sales, the return will not be refunded; if the product is damaged due to packaging problems, the warehouse will directly refuse the parcel. Also refuse to receive the parcel with freight collect, thank you for your cooperation!